

mont·bell

取扱説明書

ポケットタブル ベビーキャリア

Pocketable Baby Carrier

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しく調節し、固定個所を確実に締めてご使用ください。
 なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長

お出かけ時の持ち運びに便利な、コンパクトに収納できる軽量の抱っこひもです。ウエストハーネス式で疲れにくく、対面抱きとおんぶの二通りの使い方が可能です。また、子どもの頭の揺れを防ぐフードなど便利な機能を搭載しています。

適応範囲の目安

対面抱き 首がすわって(4ヶ月位)~13kg(24ヶ月位)

おんぶ 腰がすわって(6ヶ月位)~15kg(36ヶ月位)

*一般的な月齢、体重、発育段階をもとに作成した適応範囲です。お子さまの発育には個人差がありますので、上記表示は目安としてください。

■ 各部の名称



■ 安全上の注意 必ずお読みください

⚠ 危険 人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

●落下に注意

- 本製品を自転車やスキーなどのスポーツ時に絶対に使わないでください。お子さまが落下する恐れがあります。
- 本製品を使用している際は、腰を曲げて前屈みにならないでください。お子さまが前方に落下する恐れがあります。
- 本製品の使用中には絶対にウエストハーネスのバックルを外さないでください。お子さまが落下する恐れがあります。
- お子さまを本製品で抱いたまま抱き方を变更しないでください。お子さまが落下する恐れがあります。

●窒息に注意

- 各ベルトをきつく締めないでください。お子さまが窒息する恐れがあります。
- お子さまの顎と胸が使用者の胸に密着しないように注意してください。お子さまの気道をふさぐ恐れがあります。
- 本製品の使用中はお子さまの気道をふさぐことがないよう、常にお子さまの状態に注意してください。

⚠ 警告 場合により人が死亡または重傷を負う可能性が想定される内容です。軽傷または物的損害が発生する頻度が高いことが想定される内容です。

- 本製品の改造や分解などは絶対にしないでください。性能が損なわれ、十分に保護能力が発揮できない恐れがあります。
- 正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発揮できない恐れがあります。
- お子さまを乗せて本製品を必要以上に振ったり、揺すぶったりしないでください。お子さまが落下する恐れがあります。
- 本製品を使用してお子さまを抱いたり、降ろしたりするときは、できるだけ慎重にゆっくりと行ってください。
- 使用中は本製品により、お子さまの腕や脚が圧迫されていないか注意してください。
- 本製品を使用する前には、各部のゆるみや損傷のないことを確認してください。
- ご使用前には縫製や全てのバックル、ストラップが正常に機能するか確認してください。破損がある場合は絶対に使用しないでください。
- 本製品は、大人が背負うように設計されています。子どもが背負うと、事故の原因となる恐れがあります。
- 対面抱きで使用する際はお子さまの頭で前方や足下の視界が妨げられないよう装着し、歩行中も注意してください。

⚠ 注意 人が傷害を負ったり物的損害の発生が想定される内容です。

- 本製品は1人用です。2人以上のお子さまを乗せないでください。
- バックルの開口部にお子さまの指などが挟まれないように注意してください。また、使用していないときもバックルは差し込んだままにしてください。
- 使用に慣れるまでは、他の人に手伝ってもらうことをおすすめします。
- 使用中にお子さまが不快感を示した場合は、使用を中止してください。また、使用者の体調がすぐれないときや、身体に痛みを感じる際も使用は控えてください。
- お子さまの肌に本製品の跡がついたり肌がこすれて赤くなる場合は、露出部を服やタオルで覆い、本製品が直接触れないようにしてください。
- ほ乳後30分くらいは本製品の使用を控えてください。お子さまのおなかを圧迫することがあります。
- 連続しての使用は2時間以内とし、お子さまの体調変化や装着状況を確認してください。
- 料理などの家事の際や、自転車に乗りながらの本製品のご使用は危険を伴いますので、使用は控えてください。

■ 使用前の点検


- 全てのバックル、ストラップや生地に破損が無いか
- 全てのバックル、ストラップが正常に機能するか
- 全てのベルト、ストラップが適切な長さか
- ハーネスストラップは適切な位置にあるか

■ 使用前の準備

- 使用前にお子さまを乗せていない状態で装着手順を確認し、全てのベルト、ストラップの位置や長さを適切に調節して正しく使用できることを確認してください。
- 「おんぶ」で使用される前は、「対面抱き」よりもショルダーストラップを長めに調節しておいてください。
- お子さまの身長に対して背当て部分が高い場合は、ウエストハーネスを高めめの位置に装着してください。また、お子さまのお尻の下にタオルなどを敷き、お子さまの高さを調節してください。


■ 使用方法

○ウエストハーネスの装着方法

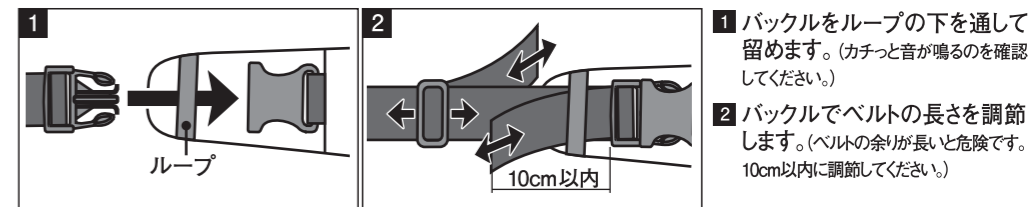


○対面抱きでの使用方法

- 1 ウエストハーネスを装着します。
- 2 お子さまを抱き上げ、両足を開脚させます。
- 3 右手でお子さまを支え、左腕を左のショルダーストラップに通します。
- 4 左手で本製品の上からお子さまを抱き、右腕を右のショルダーストラップに通します。

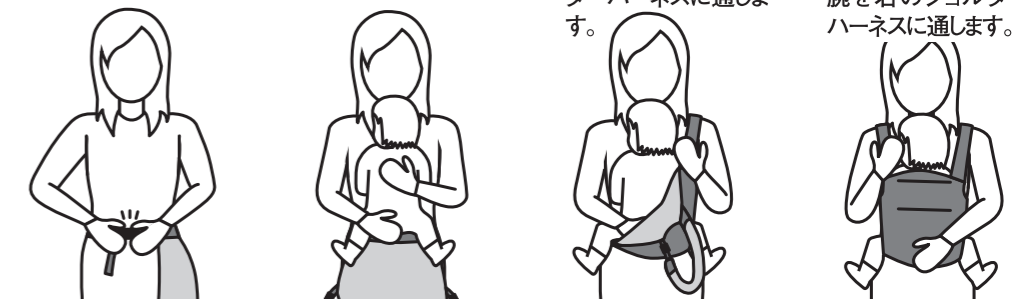

- 5 ハーネスストラップを留めます。
- 6 ハーネスストラップの長さを調節します。
- 7 お子さまの腕が適切に出ていることを確認し、ショルダーストラップAを調節します。
- 8 お子さまが本製品の中央下部で、安定しているか確認します。

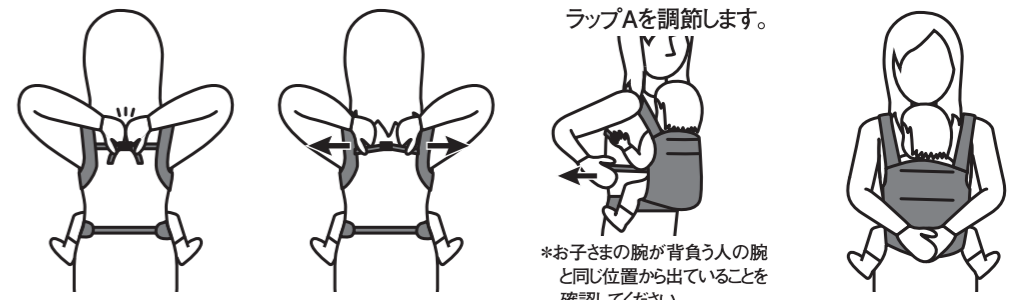

*お子さまの腕が背負う人の腕と同じ位置から出ていることを確認してください。


○ 対面抱きからお子さまを降ろす方法

- ①左手でお子さまを支えながら、右手でハーネスストラップのバックルを外します。
- ②お子さまを支えながら、左右のショルダーハーネスを肩から外します。
- ③両手でお子さまを安全な場所に降ろしてから、ウエストハーネスを外します。




○ おんぶでの使用方法

- ①本製品のウエストハーネスを装着し、右側の腰に下げます。
※①で本製品を背面に回すため、ウエストハーネスは、少し緩めしてください。
- ②お子さまを抱き上げ、右手で支え、左手で本製品をお子さまに被せます。
※お子さまが落下しないよう、注意してください。
- ③右手で本製品の上からお子さまを支えるように持ち替え、本製品を後方へゆっくりと回して左手を左のショルダーハーネスに通します。
- ④右手でお子さまを支えながら、左手で右のショルダーハーネスを取り、お子さまを本製品で支え、右手を右のショルダーハーネスに通します。

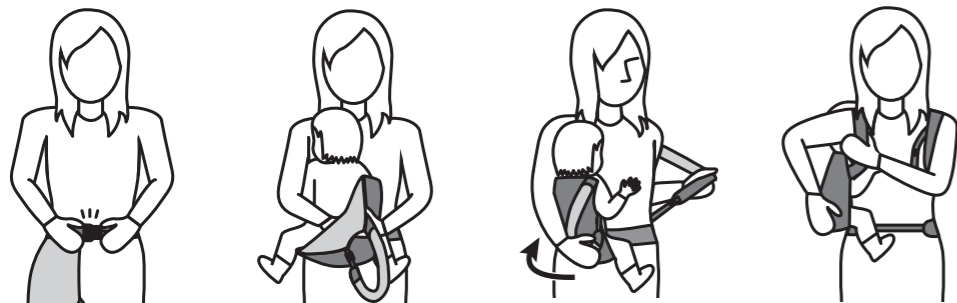

- ⑤右手で右のショルダーハーネスがずり落ちないように持ち、お子さまの位置を背面まで調節します。
- ⑥ハーネスストラップを留め、ハーネスストラップの長さを調節します。
- ⑦お子さまの腕が適切に出ていることを確認し、ショルダーストラップBを調節します。
- ⑧お子さまが本製品の中央下部に位置し、安定しているか確認します。

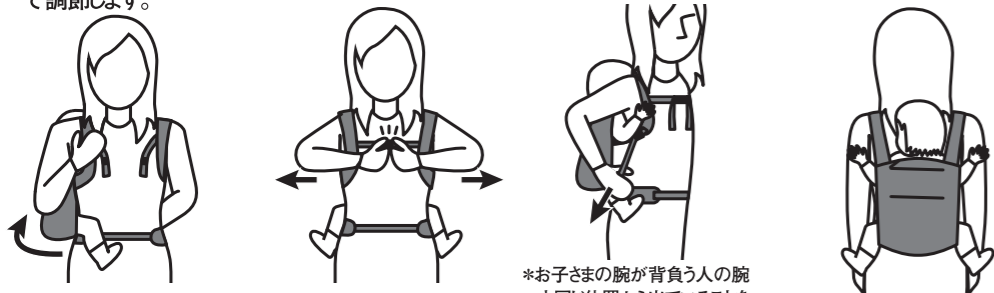

*お子さまの腕が背負う人の腕と同じ位置から出ていることを確認してください。


4

○ おんぶからお子さまを降ろす方法

- ①ショルダーストラップBを緩め、ハーネスストラップを外します。
- ②本製品を右の腰に回します。
- ③左手での右のショルダーハーネスを持ち、本製品でお子さまを支え、右腕をショルダーハーネスからはずします。




- ④右手で本製品の上からお子さまを支え、左手で左のショルダーハーネスをはずします。
- ⑤両手でお子さまを安全な場所に降ろしてから、ウエストハーネスを外します。

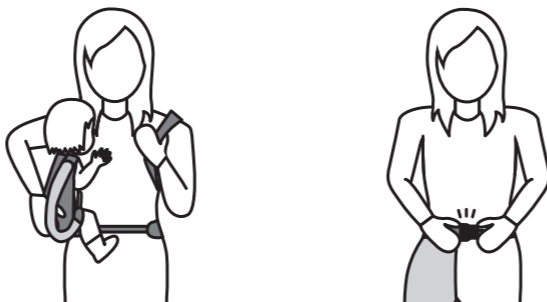

○ フードの使用方法

- ①フード収納ポケットからフードを取り出します。
- ②お子さまの頭を支えるように、フードを被せます。
- ③フードのフックを、ショルダーハーネスのフード用ループに引っ掛け、テープの長さを調節します。

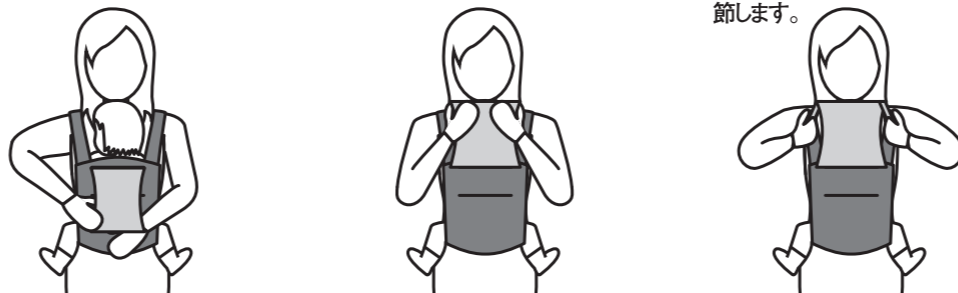

5

■ お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。使用後や保管時は以下の点を参考にしてください。

- 洗濯機をご使用の場合は、ネットに入れてください。
- ドライクリーニングはしないでください。生地を傷める恐れがあります。
- ジッパーの動きが固くなりましたら、別売のスーライダー™やローソクの口を塗ると回復します。

■ 保管方法

- 火や暖房器具のそばなど、高温になる所に置かないでください。変形や損傷の原因になります。
- 保管場所は直射日光の当たらない風通しの良い場所を選んでください。
- ガソリンやシンナーと一緒に保管しないでください。

■ 廃棄方法

- 廃棄方法はお住まいの自治体の収集方法に従ってください。

■ アフターサービス

お問い合わせいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お問い合わせいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ 仕様

品番：1124589
品名：ポケットブル ベビーキャリア
主素材：ナイロン、ポリエステルメッシュ

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

mont·bell

User's Manual

Pocketable Baby Carrier

Pocketable Baby Carrier

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

■ Features

Compact, lightweight baby carrier is the perfect size for bringing with you when going out with your child. Can be worn on the back or in the front, and includes a hood to hold your child's head in place.

Suitable for

Front carrying (Facing inward) A baby who can hold his head up or a child weight up to 13kg (around 4 to 24 months)

Back carrying A baby who can sit up or a child weight up to 15kg (around 6 to 36 months)

*The guide line above shows a child's general age, weight, and growing stages. May not be suitable depending on child.

■ Components



■ Safety Warnings! Please read carefully.

⚠ DANGER! Under certain conditions, use of this product can result in major injury or death.

● FALL HAZARD!

- Do NOT use this product while performing other activities or sports, such as cycling or skiing.
- Do NOT bend at the waist when using the carrier. Bend at the knees to prevent your child from falling accidents.
- Do NOT unfasten the waist harness while using this product.
- Do NOT change child's position when using this product.

● SUFFOCATION HAZARD!

- Do NOT adjust straps too tightly.
- Do NOT allow child's chin or chest to rest on your chest.
- When using this product, always make sure child's mouth and nose is unobstructed.

⚠ WARNINGS! Under certain conditions, use of this product can result in injury, death, or property damage.

- Do NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.
- Please follow recommended care and storage instructions. Improper care and storage can lead to decrease in performance.
- Try to prevent swinging or shaking the carrier as much as possible when carrying your child.
- When using this product, gently carry and lower a child.
- When using this product, make sure child's arms and legs are unobstructed.
- Prior to use, check the product for loosening and damage.
- Prior to use, check the product's straps and buckles function properly. Stop using immediately if you notice any damage or irregularities.
- This product is for adults ONLY. Do NOT allow a child to carry another child.
- When front carrying an inward-facing child, make sure that the child's head doesn't interfere with your vision or walking.

⚠ CAUTION! Under certain conditions, use of this product can result in injury or property damage.

- This carrier is meant for one child. Do not allow two children to ride in this carrier.
- Do NOT allow child's fingers to slip into buckle openings. Always fasten buckles when not in use.
- Prior to use, practice wearing the baby carrier and ask for help if necessary.
- Stop using product if child shows signs of discomfort and if the carrier's ill or feels pain.
- If direct skin contact causes redness or rash, cover child's exposed skin with clothes or towels to prevent direct contact with product.
- Do NOT use immediately after a child has eaten. May place pressure child's stomach.
- Do NOT use for more than 2 hours at a time and always monitor child's health and carry position.
- Do NOT use this product during cooking, housework or cycling.

■ Prior to use, inspect this product for:


- Buckles, straps, and fabric damage.
- Buckles and straps function properly.
- Straps length is properly adjusted.
- Waist harness is properly adjusted.

■ Prior to Use

- Prior to use, practice wearing the baby carrier without a child and adjust waist harness and shoulder straps.
- When back carrying a child, adjust length of the shoulder straps slightly longer than when front carrying.
- Wear the waist harness slightly higher when the back panel is longer than child's height. Insert a towel or cushion underneath the child to adjust height.

■ Using the baby carrier

○ Fastening waist harness

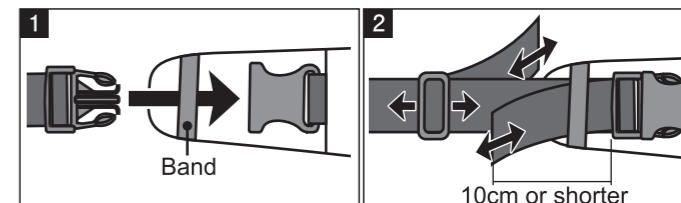


- 1** Pass the buckle through the band and fasten. (Make sure buckle clicks securely)
- 2** Adjust strap length. Adjust length to 10cm or shorter. Any longer poses a danger.

○ Front carrying position (Facing inward)


- 1** Fasten the waist harness.
- 2** Hold child and spread their legs to the sides.
- 3** Hold child with your right hand and shoulder the left shoulder harness.
- 4** Hold child with your left hand over the baby carrier and shoulder the right shoulder harness.



- 5** Fasten the harness strap.

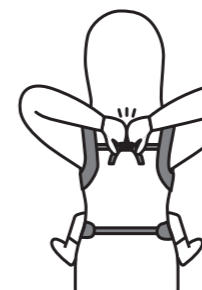

- 6** Adjust length of the harness strap.

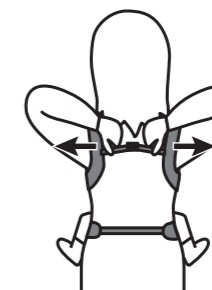

- 7** Make sure child's arms are coming out from the baby carrier and adjust shoulder strap A.




- 8** Make sure child is securely sitting in the center.



* Make sure child's arms exit the carrier at the same point your arms exit the carrier.



○ Unfastening front carrying position (Facing inward)

- 1 Hold child with your left hand and unfasten the harness strap using your right hand.
- 2 Remove both shoulder harness from the shoulder while holding child.
- 3 Use both hands to lower child and then unfasten the waist harness.

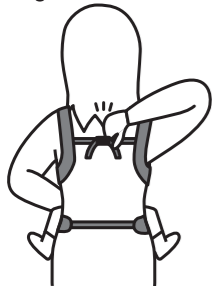

○ Back carrying position


- 1 Fasten the waist harness and move the baby carrier to the right side of the waist.
 - 2 Hold child with your right hand and place the baby carrier over the child using your left hand.
 - 3 Hold child with your right hand over the baby carrier and gently turn the baby carrier to the back. Shoulder the left shoulder harness.
 - 4 Hold child with right hand and hold the right side of the shoulder harness with your left hand. Shoulder the right shoulder harness.
- *3 Slightly loosen the waist harness to easily move the baby carrier to the back.
*Make sure the child doesn't fall.

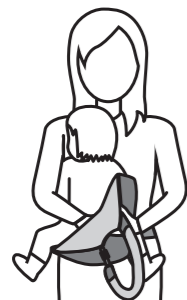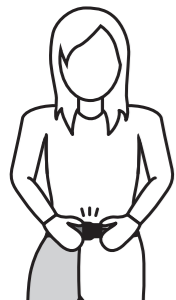

- 5 Hold the right side of the shoulder harness with your right hand and gently move the child to the back.



- 6 Fasten and adjust length of the harness strap.

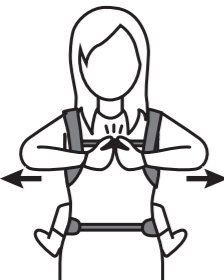

- 7 Make sure child's arms are coming out from the baby carrier and adjust shoulder strap B.



* Make sure child's arms exit the carrier at the same point your arms exit the carrier.

4

○ Unfastening back carrying position

- 1 Loosen shoulder strap B and unfasten the harness strap.
- 2 Move the baby carrier to the right side of the waist.
- 3 Hold the right shoulder harness with your left hand and remove your right arm from the shoulder harness.




- 4 Hold child with your right hand over the baby carrier and remove your left arm from the left shoulder harness.
- 5 Use both hands to lower child and then unfasten the waist harness.



○ Using the hood

- 1 Pull the hood out from its pocket.
- 2 Cover the child's head with the hood.
- 3 Attach the hood's hook to the attachment loop and adjust its length.

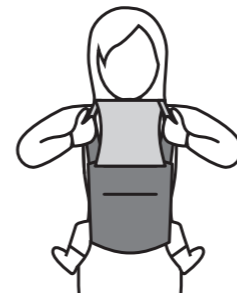

5

■ Care

- Use a washing net when washing.
- Do NOT dry clean. May cause damage.
- If zipper movement becomes stiff, use Smooth Slider (sold separately) or candle wax to restore functionality.

■ Storage

- Do NOT store in a car or places subject to temperature extremes.
- Store in a well ventilated, cool, dry place. Keep out of direct sunlight and ultraviolet light.
- Do NOT store together with gasoline or paint thinner.

■ Disposal

- Please follow local regulations regarding waste disposal.

■ Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at our discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

■ Specifications

Style# : 1124589
Name : Pocketable Baby Carrier
Material : Nylon, Polyester mesh

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN
www.montbell.com

6

44-3029-1707