

mont·bell

取扱説明書

## ドライフロント バッグ

Dry Front Bag

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書（以下「本説明書」といいます）は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは（株）モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

## ■ 特長

ウェルディング加工を施すことで極めて高い防水性を実現したフロントバッグです。別売の「フロントバッグマウント」と「フロントバッグ フレーム」を用いて、ハンドルバーの前方にワンタッチで着脱可能。自転車を離れる際に、付属のショルダーベルトを使用してショルダーバッグとして持ち運ぶことができます。天頂部にベルク口で取り外し可能なマップケースを搭載。

※装着には「フロントバッグ マウント」と「フロントバッグ フレーム」が必要です。

## ■ 各部の名称

■ 安全上の注意 **必ずお読みください**

**!** **注意** 人が傷害を負ったり物的損害の発生が想定される内容です。

- 自転車の形状やシフトレバー・ケーブルの干渉などによっては取り付けできない場合があります。
- 取り付け後、運転に支障がないか必ず確認してください。
- 本製品の開口部は使用方法に従い確実に閉じてください。閉じられていないと、荷物が落ちたり、本来の防水性を発揮できない場合があります。
- 本製品は高い防水性を持ちますが、完全防水ではありません。
- 耐荷重を超える重量のものを入れないでください。
- マップケースのジッパーは必ず閉じた状態で保管してください。開いた状態で保管すると操作が硬くなる場合があります。

## ■ 使用前の点検

使用にあたっては、毎回必ず次のことを確かめてください。  
異常が見られた場合は使用しないでください。

- 本製品が自転車にしっかりと固定されているか  生地やテープ、バックルに破れや破損がないか


## ■ 使用方法

⚠️ 取り付けには、別売の「フロントバッグ マウント」および「フロントバッグ フレーム」が必要です。


### 取り付け方法

① 「フロントバッグ マウント(別売)」を付属の取扱説明書を参考に自転車に取り付けてください。

② 「フロントバッグフレーム(別売)」を本製品のスリーブに通します(図A)。

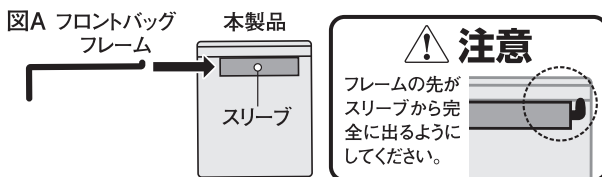

③ 本製品の2カ所のベルトを「フロントバッグフレーム(別売)」に固定します(図B)。

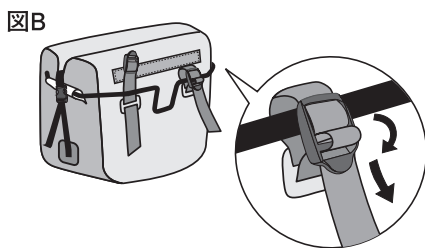


④ 「フロントバッグ フレーム(別売)」を付属の取扱説明書を参考に「フロントバッグ マウント(別売)」に固定します。

### 使用方法

開口部を図のように3回折り返し、左右のバックルを留めます(図C)。


※正しく閉じられていないと、本来の防水性を発揮できない場合があります。

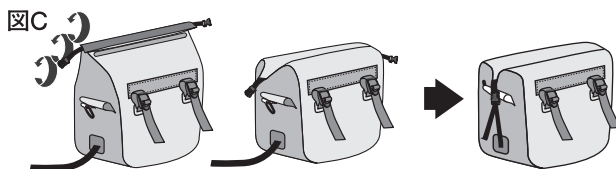

### マップケースの着脱方法

マップケースの前部のベルクロを本体前部のスロットに取り付けた後、本体後部ベルクロにも固定します(図D)。

ジッパーが硬く、閉じにくい場合はジッパーを折るようにすると容易に閉じることができます(図E)。

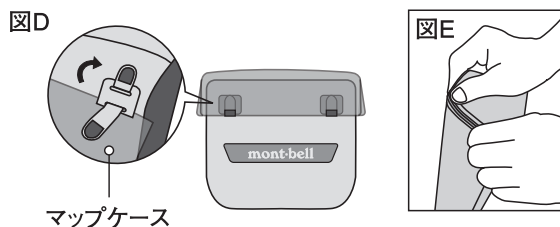

### ショルダーベルトの取り付け方

本体のDリングにショルダーベルトのフックを固定します。

## ■ お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。  
使用後や保管時は以下の点を参考にしてください。

- 油污れや泥の汚れは水で軽く洗い流した後に中性洗剤を含ませたスポンジでブラッシングをし、洗剤を洗い流してから陰干ししてください。
- ドライクリーニングや洗濯機による洗濯はしないでください。生地を傷める恐れがあります。

## ■ 保管方法

- 保管場所は直射日光に当たらない風通しの良い涼しい場所を選んでください。
- 火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。
- マップケースのジッパーは必ず閉じた状態で保管してください。開いた状態で保管すると操作が硬くなる場合があります。

## ■ 廃棄方法

- 廃棄方法はお住まいの自治体の収集方法に従ってください。

## ■ アフターサービス

お問い合わせいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お問い合わせいただいた販売店、もしくは下記の弊社窓口までご連絡ください。製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

## ■ 仕様・サイズ

品番: 1130583 耐荷重: 2.0kg (マウントの耐荷重)  
品名: ドライフロントバッグ 主素材: 【本体】420デニール・ナイロン・オックス[ウレタン・コーティング]  
容量: 8 L 【マップケース】TPU

### 別売オプション

- フロントバッグ マウント
- フロントバッグ フレーム

## ■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

# mont-bell

## User's Manual

# Dry Front Bag

### DRY FRONT BAG

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.


If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

### ■ Description

Welded seams provide exceptional weatherproofing. Attach and detach from the handlebars in one touch with the Front Bag Mount and Front Bag Frame (both sold separately). When detached from the bicycle, it can be worn as a shoulder bag using the shoulder belt. Comes with a removable map case on the top of the bag.

※Front Bag Mount and Front Bag Frame are required to attach this product to the bicycle.

### ■ Components

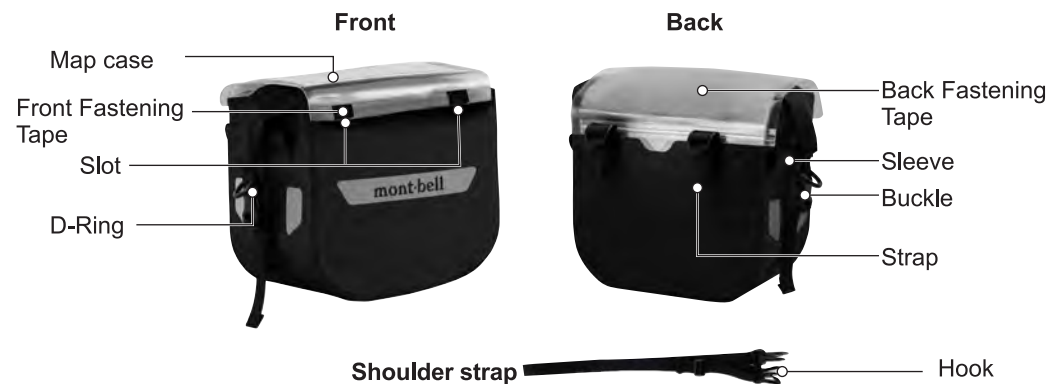

### ■ Safety Warnings!

Please read carefully.



#### CAUTION!


Under certain conditions, use of this product can result in injury, death, or property damage.

- Depending on the shape of your bicycle, position of the shift levers, or the position of the shift cables, it may not be possible to attach this product to your bicycle.
- After installing this product, always check that the product does not hinder riding abilities.
- Always close the opening of this bag securely. If the bag is not closed properly, it may lead to a decrease in water resistance.
- Though this product provides excellent weatherproofing, it is not completely waterproof.
- Do NOT exceed maximum weight capacity.
- Always store this product with the zipper on the map case closed. If stored open, the zipper may become stiff.

## ■ Prior to use, inspect this product for:

- Insecure attachment points.
- Damage to the bag's fabric, buckles or straps.


## ■ Directions

 **Front Bag Mount and Front Bag Frame (both sold separately) are required to attach this product to a bicycle.**


### Attaching to a bicycle

① Attach the Front Bag Mount (sold separately) to the bicycle according to the user's manual.

② Pass the Front Bag Frame (sold separately) through the sleeve of this product (see Fig. A).

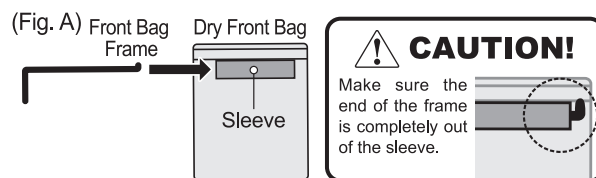

③ Secure the two straps on this product to the Front Bag Frame (see Fig. B).

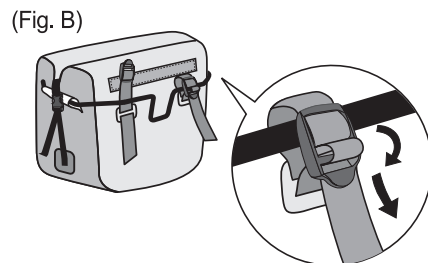


④ Secure the Front Bag Frame to the Front Bag Mount (refer to each user's manual.)

### Directions

Fold down the opening three times and secure the left and right buckles (see Fig. C).


\*If the bag is not closed properly, it may lead to a decrease in water-resistance performance.

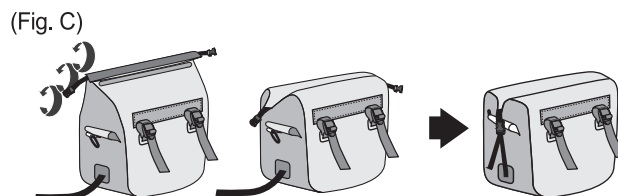

### Attaching the map case

Loop the tabs on the front of the map case through the slots on the front of the bag, and secure. Fix the other end of the map case to the fastening tape on the backside (Fig. D).

If the zipper gets stuck, or has a hard time closing, bend it slightly to easily zip it closed (Fig. E).

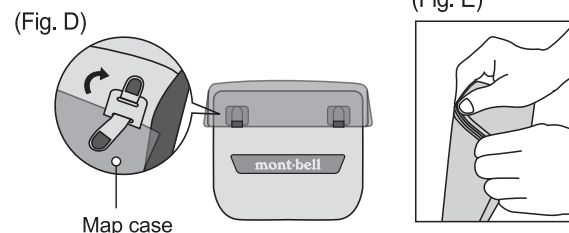

### Attaching the shoulder strap

Attach the shoulder strap's hooks to the bag's D-rings.

## ■ Care

Improper care and storage of this product can shorten its lifespan. Follow the recommendations below to extend the lifespan of your product.

- Wash away stains and soiling with water. Use a sponge with a mild soap and wash thoroughly. Avoid direct sunlight and allow to air dry in a cool, well-ventilated area.
- Do NOT dry clean or wash in a washing machine. It may cause tears and damage.

## ■ Storage

- Store in a well-ventilated, cool, dry place away from direct sunlight.
- To prevent deformation and damage, do NOT store near heat sources.
- Always store this product with the zipper on the map case closed. If stored open, the zipper may become stiff.

## ■ Disposal

- Please follow local regulations regarding waste disposal.

## ■ Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

## ■ Specifications

Style#	: 1130583
Name	: Dry Front Bag
Weight limit	: 2.0kg ※Weight capacity of Front Bag Mount
Volume	: 8L
Material	: [Bag]420-denier nylon ox (urethan coated) [Mapcase] TPU

### Options (Sold separately)

Front Bag Mount  
Front Bag Frame

## ■ Others

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.