

■ 保管方法

○本製品を長期間使用せずに保管する場合は、なるべくゆるくたたみ、直射日光の当たらない風通しの良い場所に保管してください。付属の収納袋は、携行性を重視しているため、きつめにたたまいと入らないので使用を避けてください。

○火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。

■ 廃棄方法

○廃棄方法はお住まいの自治体の収集方法に従ってください。

■ アフターサービス

ご購入いただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、ご購入いただいた販売店、もしくは下記の弊社窓口までご連絡ください。製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ 仕様

○ 寸法

- #1122662
グラウンドシート ドーム1型
82×202 cm
- #1122663
グラウンドシート ドーム2型
122×202 cm
- #1122664
グラウンドシート ドーム3型
172×202 cm
- #1122665
グラウンドシート ドーム4型
192×222 cm
- #1122666
グラウンドシート ドーム6型
212×322 cm (最大)

○ 素材

40デニール・ナイロン・リップストップ (ウレタン・コーティング)

○ 対応テント

- ステラリッジ®テント1・2・3・4・6型
- マイティドーム1・2型

※2014年製造以前の「ステラリッジ®テント」1型は対応していません。

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

mont·bell

取扱説明書

グラウンドシート ドーム用

Footprint For Dome Tent


この度はご購入いただき、誠にありがとうございます。この取扱説明書(以下「本説明書」といいます)は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは(株)モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長

本製品はドーム型テントのフロア(底部)の保護をするためにテントの下に敷く、軽量でコンパクトなシートです。ポールとレインフライを利用して自立式タープとしてもご利用いただけます(マイティドームは除く)。

■ 各部の名称

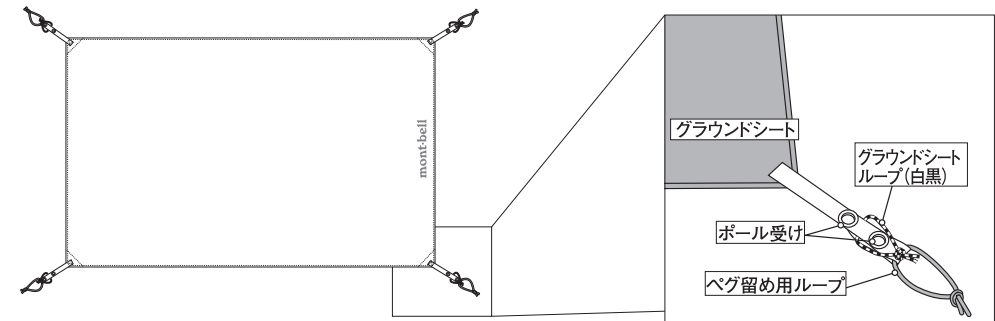

構成部品

本体



収納袋



取扱説明書
(本説明書)



※テント本体は付属しません。

■ 安全上の注意 必ずお読みください

⚠ 危険 人が死亡または重傷を負う危険が差し迫って生じることが想定される内容です。

- 本製品内や本製品の近くでは、絶対に火気を使用しないでください。火災や一酸化炭素中毒の恐れがあります。
- 台風、落雷、強風、豪雨、大雪などの厳しい自然条件の際は、キャンプ場の管理担当者の指示に従い安全な場所に避難してください。
- 河原や河川付近に設営する際は気象条件により突然増水することがあります。設営場所は特に注意してください。

⚠ 警告 場合により人が死亡または重傷を負う可能性が想定される内容です。軽傷または物的損害が発生する頻度が高いことが想定される内容です。

- 本製品を設営される際は、周囲の環境や気象条件などを充分考慮し、安全を確認してください。
- 本製品の設営の際は水はけがよく、出来るだけ平らな場所を選んでください。
- 本製品の改造や分解などは絶対にしないでください。性能が損なわれ、十分に保護能力が発揮できない恐れがあります。
- 使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合は直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。
- 正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発揮できない恐れがあります。

⚠ 注意 人が傷害を負ったり物的損害の発生が想定される内容です。

- 稜線上や大木の近く、広い草原では落雷にも注意してください。
- キャンプ場やキャンプ許可地以外では使用しないでください。
- 設営地はできるだけ平坦で、危険のない場所を選んでください。
- 使用の際は必ずペグで固定してください。砂地や雪上では状況に応じたペグ等が別途必要です。
- 本製品は太陽光線の紫外線により生地が劣化します。また、硫黄ガスが発生する温泉地等でも寿命を縮めますのでご注意ください。
- 本製品に慣れるため、実際にフィールドへ出かける前に必ず試し張りを行ってください。
- 小さいお子さまにペグ打ちの作業をさせないでください。


■ 使用前の点検

- ポール受けなどの破損がないか 生地に破れがないか

■ 使用方法

○ テントの下で使用する場合

- ①通常の手順でテント本体を組み立てます。
 - ②収納袋から本製品を取り出して地面に広げます。このときモンベル・プリントがある面が上側になるように敷きます。また、このプリントのある辺がテント本体の入り口のある辺と一致するようにします(図A)。
 - ③地面に広げた本製品の上にテント本体を置きます。組み上がったテント四隅のポール受けに差し込まれたポールをさらに本製品の四隅のポール受けに差し込み、ペグで固定します(図B)。
- ※ポール受けへのポールの固定は通常は外側で行ってください。雨、結露などで生地の張りが弱まった際は内側で行います。

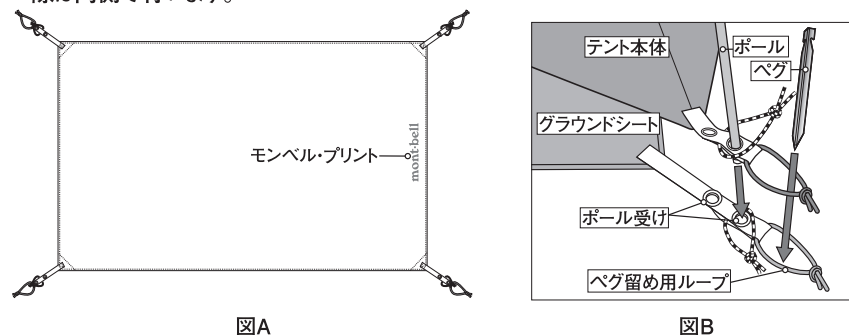

図A

図B

○ 自立式タープとして使用する場合

- ①収納袋から本体を取り出して地面に広げます。
- ②テント本体に付属しているポールを組立て、本製品の四隅のポール受けに差し込みます。
- ③レインフライをポールの上に被せ、レインフライ裾の4箇所のフックを本製品の四隅のループ(白黒)に掛けます(図C)。
- ④レインフライ裏の4箇所のベルクロでポールを固定します。



図C

※写真はステラリッジ® テント3型のレインフライ、ポールと本製品を組み合わせたものです。

レインフライ、ポール、張り綱は本製品に付属していません。テント本体に付属しているパーツを使用してください。

■ お手入れ方法 間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。使用後や保管時は以下の点を参考にしてください。

- 使用後は、泥汚れなどをあらかじめ水洗いし、陰干して乾燥後に収納してください。汚れたまま、あるいは濡れたまま長時間放置するとカビの発生する可能性があり、また生地も劣化しやすくなります。
- 長期の使用により、撥水性能(水を弾く力)が低下した場合は別売のS.R. スプレー等の撥水スプレーをご使用ください。
- ドライクリーニングや洗濯機による洗濯はできません。生地を傷める恐れがあります。

Storage

- When storing for an extended period of time, store loosely in a well ventilated, cool, dry place out of direct sunlight. The product is not designed to be stored long term in its stuff sack which should only be used for transport.
- To prevent deforming and damage, do NOT store near heat sources.

Disposal

- Please follow local regulations regarding waste disposal.

Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at its discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage (s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

Specification

Measurements

- | | | |
|---|--|---|
| ○ #1122662
Footprint For Dome Tent 1
82×202 cm | ○ #1122663
Footprint For Dome Tent 2
122×202 cm | ○ #1122664
Footprint For Dome Tent 3
172×202 cm |
| ○ #1122665
Footprint For Dome Tent 4
192×222 cm | ○ #1122666
Footprint For Dome Tent 6
212×322 cm (Largest size) | |

Materials

40-denier rip-stop nylon (Urethane coating)

Compatibility

- Stellaridge Tent 1・2・3・4・6
- Mighty Dome 1・2

※ This product is not compatible Stellaridge tent 1 manufactured before 2014.

All product specifications and design are subject to change without prior notice.
Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN
www.montbell.com

mont-bell

User's Manual

Footprint For Dome Tent

Footprint For Dome Tent


Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

Description

A lightweight, compact footprint designed for Montbell's dome tents to protect the tent floor. It can also be used as a freestanding tarp when used with poles and rain fly. (Not compatible with the Mighty Dome.)

Components

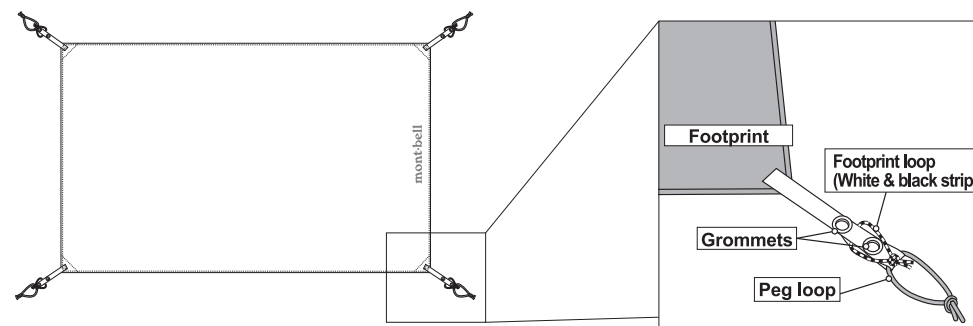

Includes

Footprint

※ Tent sold separately.



Stuff sack



User's manual



■ Safety Warnings Please read carefully.

⚠ DANGER! Under certain conditions, use of this product can result in major injury or death.

- NEVER place a flame source in or near this product. Injury or death by fire and/or carbon monoxide poisoning is possible.
- Follow instructions of the campsite management for evacuation in severe weather conditions, such as typhoons, lightning, strong winds, heavy rains, or heavy snowfall.
- When setting up near river beds and rivers, always be aware that waters may rise depending on the weather conditions.

⚠ WARNINGS! Under certain conditions, use of this product can result in injury, death, or property damage.

- Always check the safety of the surrounding environment and weather conditions when setting up.
- Choose an area that is as flat as possible with good drainage when setting up.
- Do NOT modify or alter this product. Improper modifications and alterations can damage the product and impair functionality.
- Prior to use, check the product's condition and stop using immediately if you notice any deterioration from age/use, damage or irregularities.
- Please follow recommended care and storage instructions. Improper care and storage can lead to decrease in performance.

⚠ CAUTION! Under certain conditions, use of this product can result in injury or property damage.

- Be careful of lightning in the mountains, when close to trees or in open fields.
- Only pitch tents, tarps, and shelters in areas designated for camping.
- Choose a campsite free of danger and as level as possible.
- Use pegs to stake the product at all times. Pegs may not be suitable for all ground conditions, such as sand or snow. Before pitching, check ground conditions to see if staking pegs is possible.
- Ultraviolet rays from the sun can damage the product's fabric. Sulfur gas from natural hot springs can also shorten the product's lifespan.
- Before using the product for the first time, practice at home to familiarize yourself with the product and its features.
- Do NOT allow children to stake pegs.

■ Prior to use, inspect this product for:

- Cracks or damage to grommets Tears or damage to the fabric

■ Directions

○ When used under a tent

- ① Assemble the tent according to the user's manual.
 - ② Take out the product from the stuff sack and spread out on the ground with Montbell logo facing up. Align the Montbell logo and the entrance of the tent (see Fig. A).
 - ③ Place the tent on top of the footprint. Insert the 4 poles of the assembled tent into the footprint's grommets and fix the pegs. (see Fig. B)
- ※ In regular, dry conditions insert the pole ends into the outer grommets. In wet conditions where the fabric can sag, insert the pole ends into the inner grommets.

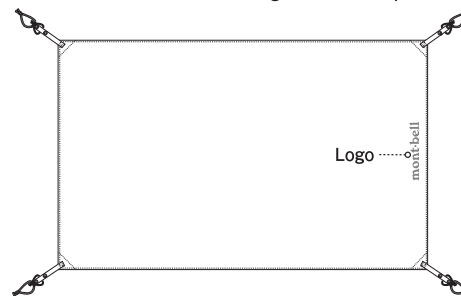


Fig. A

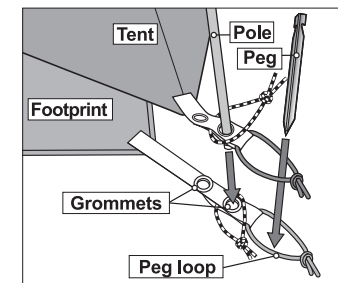


Fig. B

○ For use as a tarp

- ① Take out the product from the stuff sack and spread out on the ground.
- ② Assemble tent poles and insert into the grommets located at the four corners.
- ③ Place rain fly over the poles and attach the rain fly's four hooks to the footprint's loops (see Fig. C).
- ④ Strap the four Velcro tapes located under the rain fly on to each tent poles.



※ Stellaridge Tent 3 rain fly and poles are shown in the picture above.

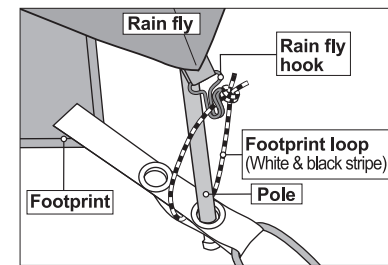


Fig. C

Rain fly, poles, guylines are sold separately. Use the parts included with the tent.

■ Care

Improper care and storage can shorten the lifespan of this product. To extend the lifespan of this product, please follow the recommendations below.

- Wash away stains and soiling with water. Avoid direct sunlight and allow to air dry in a cool well ventilated area. If stored wet or soiled, mold can grow and the fabric can start to prematurely deteriorate.
- Over time the product's water repellent treatment will deteriorate. To restore its water repellent abilities, reapply a water repellent spray (sold separately).
- Do NOT dry clean or wash in washing machine. This can damage the fabric.