

# mont·bell

## 共通取扱説明書

# アルパインポール Kid's

## Alpine Pole Kid's


この度はお買いあげいただき、誠にありがとうございます。この取扱説明書（以下「本説明書」といいます）は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは（株）モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

### ■ 特長

本製品は、子ども用に設計されたI型グリップのポールです。登山やスキーをはじめ、スノーバスケ（別売）に交換することで、深雪でのスノーシューなどのアクティビティに対応します。腕の動きに合わせて、軽快で安定した歩行を実現します。

### ■ 各部の名称

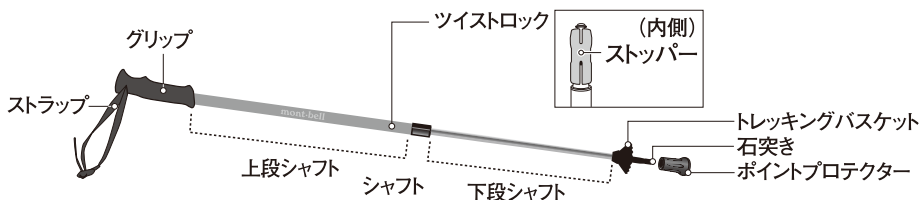

### 保護者の方へ

- お子さまがご使用になる際は、保護者の方が本説明書をよくお読みになり、お子さまが理解できるようにご説明ください。
- シャフトが確実に固定され、正しくご使用されていることを保護者の方が必ず確認してください。

### ■ 安全上の注意 必ずお読みください

**警告** 場合により人が死亡または重傷を負う可能性が想定される内容です。軽傷または物的損害が発生する頻度が高いことが想定される内容です。

- 本製品は登山用です。これ以外の目的では使用しないでください。
- 登山用ピッケルではありません。グリセードやクライミングの支点として、絶対に使用しないでください。また、両端を強い力で引っ張るとグリップやシャフトが抜けてしまう可能性があります。人や荷物の引き上げに使用しないでください。
- 岩場など手を使って確保が必要な場所では、バックパックに収納するなどして使用しないでください。
- 使用時にシャフトの固定が不十分だと転倒などの原因となり危険です。使用前には必ずロック状態を確認してください。行動中にも緩みがないかを確認してください。
- 本製品の改造や分解などは絶対にしないでください。性能が損なわれ、十分に保護能力が発揮できない恐れがあります。
- 使用前は毎回必ず点検をしてください。老朽化が認められる場合や損傷が認められたり、疑わしい場合は直ちに本製品の使用を中止してください。本来の性能が発揮できない恐れがあります。
- 正しいお手入れ方法、保管方法を守ってください。誤ったお手入れや保管方法を行うと、本来の性能を発揮できない恐れがあります。

**注意** 人が傷害を負ったり物的損害の発生が想定される内容です。

- 周囲の人や物に危害を加える恐れがありますので、使用中は振り回さないでください。

- “STOP”表示を超えて使用しないでください。使用中に破損する恐れがあります。
- シャフト及びストッパー部に潤滑油等を使用しないでください。確実な固定が得られず、転倒などの原因となり危険です。
- 横からの強い荷重をかけないでください。構造上、横方向からの荷重には縦方向ほどの強度はありません。
- 使用しないときは、石突きに必ず付属のポイントプロテクターを装着してください。
- 収納時はシャフトが脱落することがありますのでバックパックや収納ケース等に収納してください。
- 長さ調節の際に十分に固定されていても、確実に固定されているか時々確認してください。
- ポールに全体重をかけないでください。ケガやポールが破損する恐れがあります。
- シャフトが確実に固定され、正しくご使用されていることを保護者の方が必ず確認してください。
- 落雷の恐れがあるときは使用しないでください。
- 使用前および使用中も各部に異常がないか点検してください。
- 先端のポイントプロテクターがすり減った場合は速やかに専用のポイントプロテクターに交換してください。
- 高温になる場所に放置しないでください。グリップが変形したり、やけどをする恐れがあります。
- ツイストロックを強く締めすぎると、ストッパー内部を傷めたり、固定したまま緩められなくなる恐れがあります。

### ■ 使用前の点検 使用にあたっては、毎回必ず次のことを確かめてください。

- ひびや変形が見られないか
- シャフトの固定は確実にできるか


### ■ 使用方法

コースや地形に応じてポールの長さ、ストラップの長さを適切に調節してください。

#### ○ トレッキングバスケットの着脱方法


##### ■ 取り付け方

トレッキングバスケットを時計回りに回しながら、空回りするまで差し込みます。

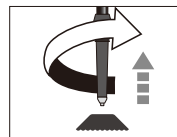

##### ■ 取り外し方


トレッキングバスケットを下方向に引きながら反時計回りに回し、引き抜きます。

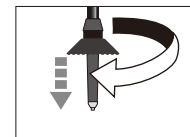

#### ○ ポイントプロテクターの着脱方法

##### ■ 取り付け方

ポールの石突きにしっかり差し込んでください。奥まで入れないと脱落する恐れがあります。

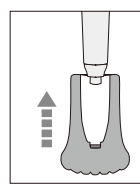


##### ポイントプロテクターの重要性

植生に影響を与える可能性のある登山道や木道では必ずポイントプロテクターを装着してください。トレッキングポールの石突きが植生にダメージを与える恐れがあります。  
※ポイントプロテクターは消耗品です。傷んだ際は交換してください。

#### ○ 長さの調節の目安 (使用する長さに応じて調節してください。)

使用の際は、保護者の方がフィールドの状況に合わせて適切に調節し、お子さまの体勢に危険が無いか、注意してください。

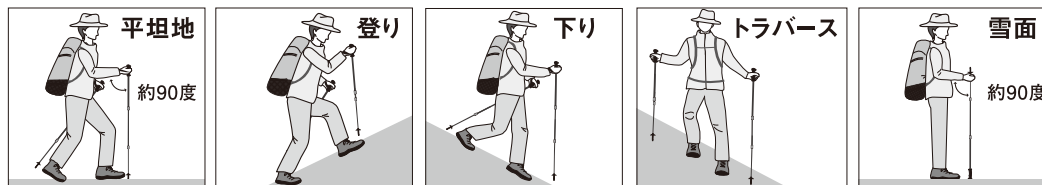

平坦地: ポールと腕の角度が、約90度になるように調節してください。

登り: 体の前に楽に突けるように短めに調節してください。

下り: 体に負担をかけない直立姿勢を維持するため、長めに調節してください。


トラバース: 山側を短めに、谷側を長めに調節してください。

雪面: ポールを逆さまにしてバスケットの下を持ったところで、肘が90度になる長さに調節してください。

## ○ 長さの調節方法


① 下段シャフトを反時計回りに回して緩めて伸ばします。

② 下段シャフトを、時計回りに回して固定します。

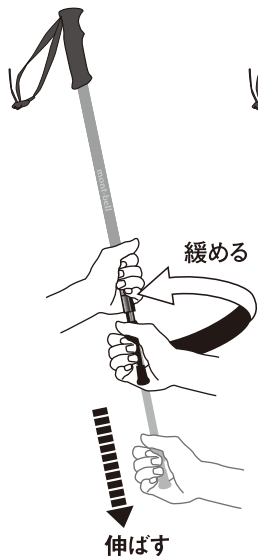

## ○ 収納方法


上段シャフトを握り、下段シャフトを反時計回りに回しながら緩めて収納し、時計回りに回して固定します。緩めたままにするとシャフトが脱落する恐れがあります。

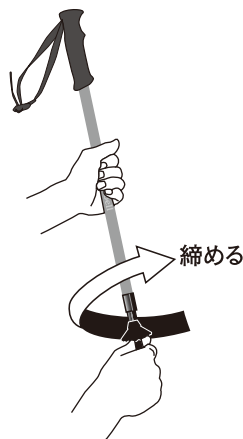

## ■ お手入れ方法

間違ったお手入れ方法や保管方法は本製品の寿命を縮めます。使用後や保管時は以下の点を参考にご覧ください。

- ご使用後は上段、下段のシャフトを外して汚れと水分をよく落とし、完全に乾燥させて保管してください。
- ストッパー部に潤滑油等を使用しないでください。確実な固定が得られず、転倒などの原因となり危険です。

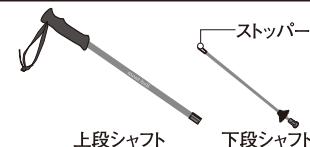

## ■ 保管方法

- 本製品を長期間使用せずに保管する場合は、直射日光の当たらない風通しの良い場所に保管してください。
- 火のそばや暖房器具のそばなどの高温になる所に置かないでください。変形や損傷の原因になります。

## ■ 廃棄方法

- 廃棄方法はお客様の自治体の収集方法に従ってください。

## ■ アフターサービス

お問い合わせいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お問い合わせいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。

- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

## ■ オプション(別売) 本製品は下記の別売のオプションを利用することができます。

- **トレッキングバスケット**  
破損、紛失時の交換用のバスケットです。
- **スノーバスケット**  
積雪期の歩行に適した交換用バスケットです。
- **ポイントプロテクター**  
紛失・消耗した際の交換用のキャップです。
- **ボールクリップ**  
2本のボールをまとめることができます。
- **ポイントプロテクター ウォーキング**  
推進力を高める形状をしたラバー製キャップです。
- **アルパイングリップ ケース W**  
ボールを2本収納できます。

## ■ 仕様・サイズ

品番: 1140198 品名: アルパインボール Kid's 使用長: 70~100cm  
素材: (シャフト)アルミニウム合金 (グリップ)エラストマー (ストラップ)ナイロン

## ■ その他



本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

株式会社 **モンベル** 本社 〒550-0013 大阪市西区新町2-2-2 Tel. 06-6531-3544 フリーコール: ☎ 0088-22-0031  
商品についてのお問い合わせはカスタマー・サービスまで モンベルホームページ <http://www.montbell.jp>

## ○ グリップの握り方

① 下方向からストラップに手を通します。

② ストラップとグリップを図のように握ります。

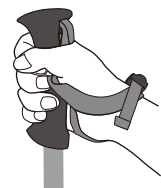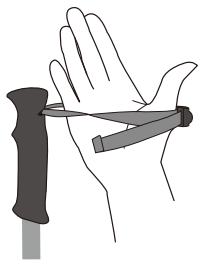


## ○ ストラップの長さの調節方法

① ストラップの長さを調節し、手にフィットさせてください。


短くするとき

長くするとき

ストラップの向きについて

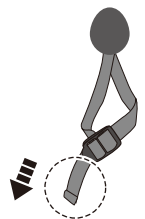


ストラップを引いてください。

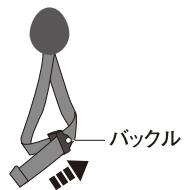

バックルを起こすとストラップが解放されます。

ボールは左右のどちらの手に持っても違和感なくお使い頂けます。

右図のように持つと、行動中もストラップの長さ調節が容易です。

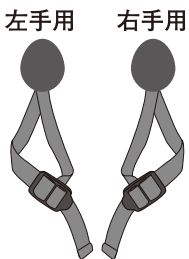

# mont·bell

## User's Manual

# Alpine Pole Kid's

### Alpine Pole Kid's


Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

## Description

This I-grip pole is designed for kids. It is perfect for hiking but can also be used for skiing and snowshoeing when used with snow baskets (sold separately). This pole provides rhythmical yet stable movement on variable terrain.

## Parts

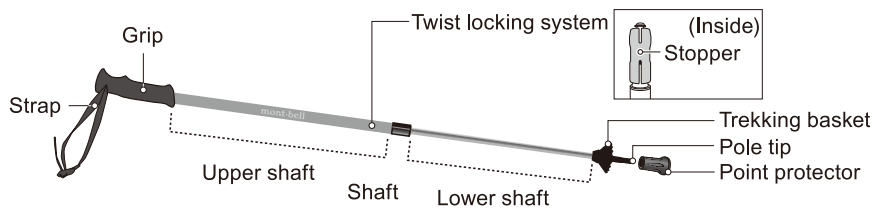

### Note to parents/guardians

- Prior to use, parents/guardians should thoroughly read this manual and ensure that the child understands proper use of the product.
- Parents and guardians should always check to see if the shafts are properly locked in place and the child is using the pole correctly.

## Safety Warnings! Please read carefully.

**! WARNINGS!** Under certain conditions, use of this product can result in injury, death, or property damage.

- For hiking and trekking use only.
- Do NOT use as an alpine axe, for glissading or as an anchor for climbing. Do NOT pull strongly on both ends of the pole as the shaft or grip can come apart. Do NOT use the pole for pulling up people or luggage.
- In rocky terrain where climbing is necessary, store poles in your backpack or its stuff sack to free up your hands.
- If the shaft is not properly secured, the shaft can come apart or slide closed during use and result in a falling accident. Prior to use, check to see if the shafts are properly locked in place and periodically check for loosening.
- Do NOT modify or alter this product. Improper modifications and alterations can damage the product and impair function.
- Prior to use, check the product's condition and stop using immediately if you notice any damage or irregularities.
- Please follow recommended care and storage instructions. Improper care and storage can lead to decrease in performance.

**! CAUTION!** Under certain conditions, use of this product can result in injury or property damage.

- Do NOT swing or wave poles around to prevent injury and property damage.
- Do NOT extend pole shafts further than "STOP" marking. This may damage the stopper during use.
- Do NOT apply lubricants to the shaft and stopper. If the shaft is not properly locked, the shaft can come apart or slide closed during use and result in a falling accident.
- Do NOT apply a strong horizontal force to the pole. Poles are not designed to support lateral forces.
- Attach protector when pole is not in use.
- When not in use, store trekking pole inside a stuff sack or backpack. Loose shafts can become dislodged and fall.
- During use, periodically check shaft for loosening.
- Never place your full weight onto this pole.
- Parents and guardians should always check to see if the shafts are properly locked in place and the child is using the pole correctly.
- Do NOT use if there is a chance of lightning.
- Prior to, during and after use, check the pole's condition for damage and irregularities.
- Replace the protector if it shows signs of heavy wear.
- Exposure to heat can cause the grip to deform and metal to become hot.
- Do NOT tighten the Twist Lock too hard. It may damage the Stopper, impairing the functions.

## Prior to use, inspect this product for:

- Cracks, damage or other irregularities
- Shafts are locked and secure


## Directions

\*Adjust pole length and strap length based on trail conditions and terrain for improved comfort while trekking.

### Trekking basket


#### Attachment

Screw on the trekking basket turning clockwise until it spins in place.

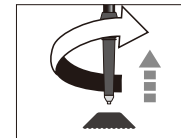

#### Removal


While applying downward pressure, turn the trekking basket counterclockwise.

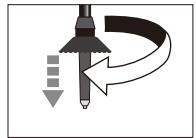

### Point protector

#### Attachment

Twist the guard onto the pole's tip until it clicks into place and makes a clicking noise. If not properly attached, point protector can become dislodged and fall off.

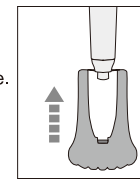


#### Protector Importance

Protect your pole tips with this protective rubber cover when they are not in use and when on the trail. Guards not only extend the life of your pole tips, but reduce damage to vegetation and impact on trails.

\*The point protector will wear down over time. Replace when necessary.

### Optimal Pole Length

Parents and guardians should adjust pole length according terrain conditions and instruct the child on correct posture.

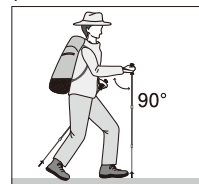

#### Level Terrain

Choose a length so the angle between your arm and the trekking pole is 90 degrees.




#### Ascending

Shorten the pole to make it easier to place the pole in front of you.




#### Descending

Lengthen the pole to make it easier to place the pole in front of you.

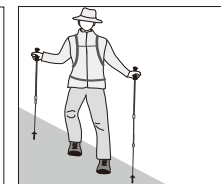

#### Traverse

Hold the side closest to the mountain at a lower position and the side closest to the valley at a higher position.

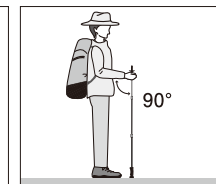


#### On Snow

Turn the pole upside down and hold below the basket. Adjust the closest to the valley at a higher pole length so the child's elbow forms a 90 degree angle.




## ○ Adjusting Pole Length

① Turn the lower shaft counterclockwise to loosen and extend the shaft.

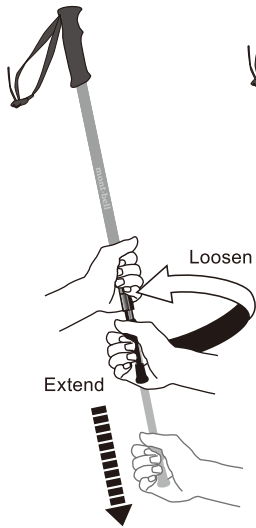

② Extend the shaft and turn clockwise to lock in place.

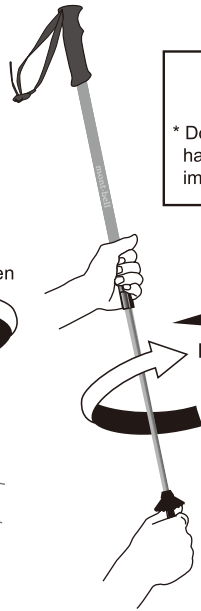


**CAUTION!**  
\* Do NOT tighten the Twist Lock too hard. It may damage the Stopper, impairing the functions.

**CAUTION!**  
Do NOT extend the shaft above the "STOP" marking. Extending the shaft above this marking can place too much force on and damage the inner stopper.


## ○ Storing

Loosen and slide close the lower shafts. Turn clockwise to lock in place. Loose shafts can become dislodged and fall.

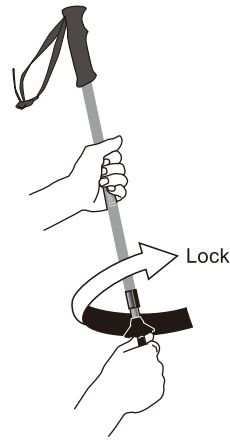

## ■ Care

- After use, disassemble the shaft, wipe off any dirt or residue and allow to dry completely before storing.
- Do NOT apply lubricants to the stoppers. If the shaft is not properly locked, the shaft can come apart or slide closed during use and result in a falling accident.

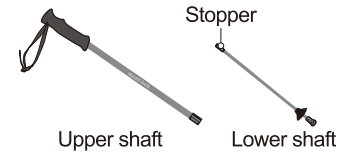

## ■ Storage

- Store in a well ventilated, cool, dry place. Keep out of direct sunlight and ultraviolet light.
- Do NOT store in a car or places subject to temperature extremes.

## ■ Disposal

- Please follow local regulations regarding waste disposal.



## ■ Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at its discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

## ○ Holding the Grip

① Put your hand through the bottom of the strap.


② Hold the strap and the grip as in the illustration below.

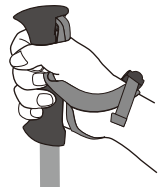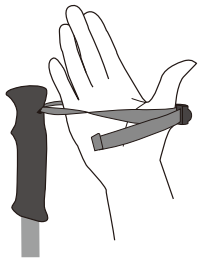

## ○ Adjusting Strap Length


① Adjust strap length to fit hands.

To shorten

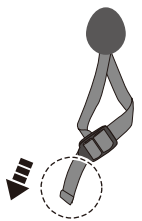

Pull the strap end.

To lengthen

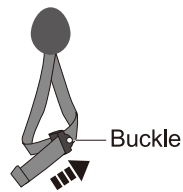


Lift buckle to loosen strap

Direction of the strap

The pole can be used by either hand.

When poles are held as shown in the figure on the right, it is easy to adjust strap fit while on the move.

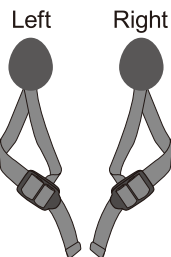

## ■ Accessories (Sold separately)

The following accessories are available for use with this product.

- **Trekking Basket**  
Replacement basket.
- **Snow Basket**  
Basket for trekking in snow.
- **Point Protector**  
Replacement protector.
- **Pole Clip**  
Stores up to two I-Grip Series poles.
- **Point Protector Walking**  
Guard with excellent gripping abilities.
- **Alpine Grip Case W**  
Stores two poles.

## ■ Specifications

Style# : 1140198 Name : Alpine Pole Kid's Usable length : 70~100cm  
Material : (Shaft) Aluminum alloy (Grip) Elastomer (Strap) Nylon

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN  
www.montbell.com