

mont·bell

取扱説明書

フェルトリペアソール

Felt Repair Sole

この度はお買いあげいただき、誠にありがとうございます。この取扱説明書（以下「本説明書」といいます）は本製品の正しい取扱方法を説明しています。ご使用前に本説明書をよくお読みいただき、正しい使用方法をご確認ください。

なお、ご不明な点等ございましたら、販売店もしくは（株）モンベル カスタマー・サービスまでお問い合わせください。本説明書は大切に保管してください。

■ 特長

本製品は保水しにくいポリプロピレン製の貼り替え用のフェルトソールです。「サワークルーザー」、「サワートレッカー」などのソールの貼り替え用としてご使用いただけます。

■ 安全上の注意 **必ずお読みください**

注意 人が傷害を負ったり物的損害の発生が想定される内容です。

- 貼り替え作業にカッターナイフなどの刃物を使用しますので、けがなどにご注意ください。
- 接着剤を使用しますので、換気の良い場所で作業をしてください。

■ 使用方法

○ 作業前の準備

- ・靴をブラシでよく洗って、陰干しで乾燥させます。
- ・以下の道具をご用意ください。
（大型カッターナイフ・ラジオペンチ・大型ペンチ・金槌・紙ヤスリ（#40程度）・油性ペン・接着剤）
- ※推奨の接着剤は「ボンド G17（コニシ株式会社）」です。
- ※接着剤の取扱いは接着剤に付属の説明書をお読みください。

1. 古いフェルトソールを剥がす

- 靴のつま先部分のフェルトソールの貼り合わせ面にカッターナイフで1～2cmの切れ目を入れます。靴の底を切らないように慎重に作業をしてください
- 切れ目が入ったらラジオペンチを使い少しずつ古いフェルトソールを剥がします。ある程度まで剥がれたら大型ペンチに替えて、巻くように剥がします。
- 古いフェルトソールが全て剥がれたら、底面に残ったフェルトを紙ヤスリで削り落とし平坦にします。この時、フェルトを完全に切り除く必要はありませんが、削りかすはよく取り除いてください。




2. 接着剤の塗布

- 新しいフェルトシートの上に靴を置き、靴底の外形をなぞるようにして油性ペンでフェルトシートに線を引きします。踵が付いている靴の場合は踵部分も同様になります。（フェルトシートに表裏はありません）

- カッターナイフでフェルトシートの上に描いた線の外側をだまかに切ります。線の内側を切らないように慎重に作業をしてください。

- 別売の接着剤に付属しているヘラなどでフェルトシートに接着剤を塗布します。フェルトは接着剤を吸うため、必ず2度塗りしてください。（1度目は薄く塗ってフェルトに接着剤の層を作ります。）フェルトシートの端部分の塗り忘れが無いようにしてください。

- フェルトを乾かしている間に靴の底側にも接着剤を塗ります。靴側は1度塗りでもかまいませんが多めに塗ってください。

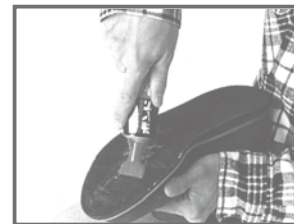

3. ソールの張り合わせ・カット

- 接着剤を触っても指に付かない程度に乾いたら、フェルトソールと靴を貼り合わせます。
※接着剤の接着強度は強力なため、一度間違った方向に貼り合わせると修正できません。細心の注意を払って慎重に貼り合わせてください。

- 貼り合わせ後にフェルトソール全体を金槌などで叩き、接着力を高めます。特につま先や踵の端部分の接着を確実にするために小槌で叩いたり、靴を履いて体重をかけてください。

- 貼り合わせが出来たら、カッターナイフで靴からはみ出した余分なフェルトソールを切り取ります。カッターナイフを上下に小刻みに動かしながら切るのが綺麗に仕上げるポイントです。踵の付いている靴の場合は、この後に踵部分のフェルトを貼り合わせます（フェルトに接着剤を塗る際は必ず2度塗りしてください）。



- 2～3日放置して接着剤が完全に乾いたら完成です。

■ アフターサービス

お買い求めいただきました本製品は万全を期して製造しておりますが、万一不備な点がございましたら、お買い求めいただいた販売店、もしくは下記の弊社窓口までご連絡ください。

製造上の欠陥による不具合の場合は無償で交換させていただきます。なお、修理、交換等の要否につきましては、弊社の裁量にて判断させていただきます。

なお、以下のような原因での破損、不良につきましては保証いたしませんのでご了承ください。


- 本製品の誤った使用方法によるもの
- 間違ったお手入れ、保管方法、経年変化による素材劣化
- 乱暴な取り扱いによるもの
- その他、製造上の欠陥以外の原因によるもの

破損時は弊社にて診断をして、修理が可能な場合はご要望により有償にて修理させていただきます。

■ 仕様・サイズ

品番：1125124
品名：フェルトリペアソール
素材：ポリプロピレン

○ 構成部品



フェルトシート
16x35x1cm 2枚



フェルトシート
16x12x1cm 2枚

■ その他

本製品の仕様、デザインは予告なく変更されることがあります。また、重量などのスペックには誤差が生じる場合があります。

mont-bell

User's Manual

Felt Repair Sole

Felt Repair Sole

Thank you for purchasing this product. Before using, please carefully read this manual for instructions on the proper care and usage of this product.

If you have any questions regarding this product, please contact Montbell Customer Service or the store of original purchase. Keep this manual for future reference.

■ Description

The replacement felt soles are made with polypropylene, a material that doesn't absorb water. This kit can be used to replace the soles of your Sawyer Cruisers or Sawyer Trekkers.

■ Safety Warnings Please read carefully.

 **CAUTION!** Under certain conditions, use of this product can result in injury or property damage.

- Caution is necessary when using a blade to remove the previous soles.
- Use adhesive in a well ventilated area.

■ Directions *For information on using the adhesive, read the included user's manual.

○ Preparations before resoling

- Wash the shoe using a brush and shade dry.
- Prepare the following:
utility knife, needle-nose pliers, pliers, hammer, sandpaper(40-grit), permanent marker, and adhesive.

1. Removing the old sole

- ① Cut away between the felt and the shoe at the toe, about 1-2cm with the utility knife. Take care not to accidentally cut the bottom of the shoe.
- ② Take the needle-nose pliers and peel back the old felt and continue to carefully cut the felt away from the shoe. After cutting a good portion of the felt, switch to pliers and continue to peel back the old felt.
- ③ Once the old felt has been completely removed, use the shoe rasp to shave off any remaining pieces of the old felt and aim to make a level surface on the bottom of the shoe.



2. Applying adhesive

- ① Take the new felt sheet and place the shoe on top of it. Using the permanent marker, trace an outline of the shoe onto the new felt. If the shoe has a heel, do the same for the shape of the heel. (The felt does not have a "right-side-up." Either side can be used.)

- ② Use the utility knife to cut along the outside of the line drawn on the felt. Take care not to cut the felt inside the line.
- ③ Attach the included adhesive adapter to the bottle of adhesive and use it to apply adhesive to the felt. The felt will "suck up" the adhesive, so please apply two coats. (For the first layer of adhesive, apply a thin coat.) Make sure there are no areas on the felt that haven't been coated.
- ④ While the felt is drying, apply coat of adhesive to the bottom of the shoe. Only one coat of adhesive is necessary, but make sure to thickly coat the bottom of the shoe.



3. Attaching the sole and trimming

- ① When the adhesive has dried to the point where touching won't stick to your fingers, attach the sole to the shoe.
※ Because the adhesive is very strong, if you make a mistake attaching the felt to the shoe, you won't be able to correct the mistake. Take great care when lining up the felt with the bottom of the shoe.
- ② Once the felt is attached to the shoe, use a small mallet to tap the felt onto the shoe, strengthening the bond. Because the heel and toes are very important to get a good bond, make sure to use the mallet in these areas and also put the shoe on and use your body weight to help bond the heels and toes.
- ③ Once the felt has been attached to the shoe, use the utility knife to cut off the extra portions of felt that are sticking out from the sides of the sole. Cut into the felt little by little will make a cleaner looking sole. If your shoe has a heel, you can then apply the felt to the heel of the shoe (make sure that the felt has 2 coats of adhesive before applying).
- ④ Allow the adhesive 2-3 days to dry completely before using.




■ Warranty

Montbell's warranty covers all defects in materials and workmanship to the original owner, for the lifetime of the product. If a product ever fails due to a manufacturing defect, Montbell will repair or replace the product at Montbell's discretion. This warranty does not cover damage(s) caused by accident, improper care, negligence, misuse, alterations or normal wear and tear. Damage(s) not covered under warranty will be repaired at a reasonable rate. If you would like to make a warranty inquiry, please contact Montbell Customer Service or the store of original purchase.

■ Specifications

Style# : 1125124
Name : Felt Repair Sole
Material : polypropylene

○ Contents



Felt Sheet
2 x sheet 16x35x1cm



Felt Sheet
2 x sheet 16x12x1cm

All product specifications and design are subject to change without prior notice. Actual product specifications may vary.

mont-bell Co.,Ltd.

2-2-2 Shinmachi, Nishi-ku, Osaka 550-0013 JAPAN
www.montbell.com